

---




---

**Product Data Sheet**

---




---

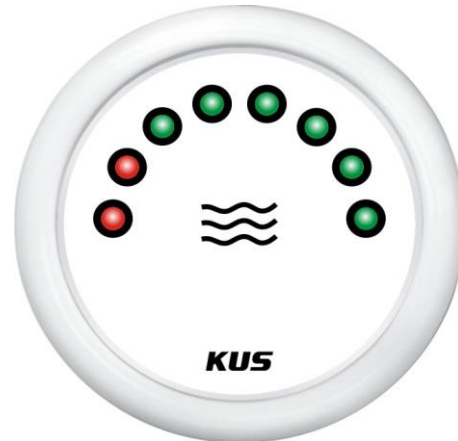

**Description:** The Water Level Gauges allow the user to remotely monitor the liquid level in the tank. These level gauges will work with any level sender with American Standard (240-33 ohms) resistive output.

<b>Product Type:</b>	8 LED Alarm Indicator		
<b>Product Name:</b>	CDWR		
<b>Bezel:</b>	SS 316 Stainless Steel	Stainless Steel in Black	Plastic in Black/White
<b>Mounting Dimension:</b>	52mm, 2"		
<b>Protection Rating:</b>	IP7 for front; works up to 1m under water		
<b>Signal:</b>	240~33Ω		
<b>Operating Voltage:</b>	12/24V		
<b>Background light</b>	Red or Yellow		
<b>Connector:</b>	Multi-plugs socket connection		
<b>Indicating Range:</b>	LOW- Full		

## Installation Instructions

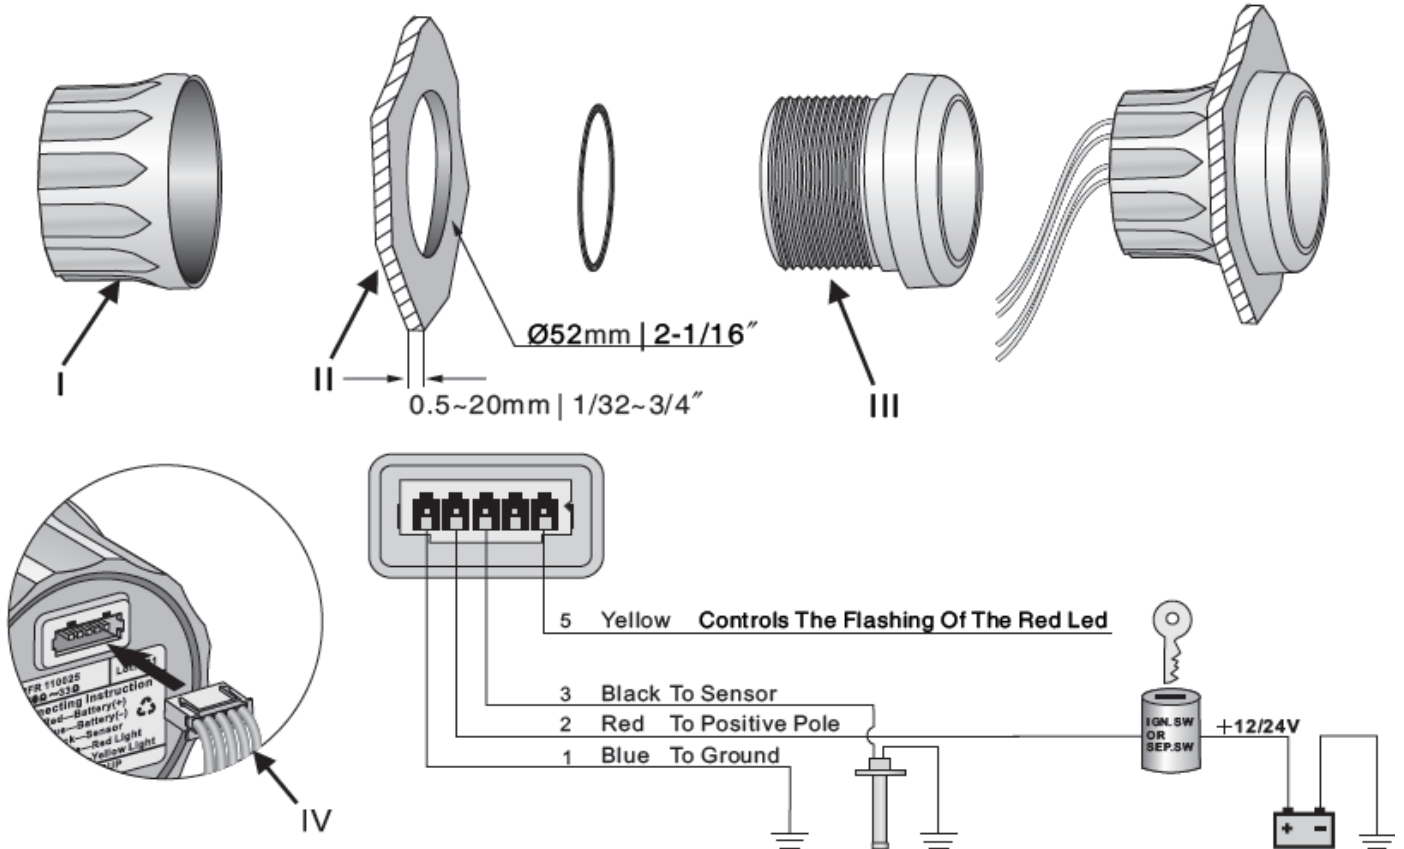

1	Blue	Blå	Blau	Bleu	Azul	Sininen	Синий	Blauw
2	Red	Rød	Rot	Rouge	Rojo	Punainen	Красный	Rood
3	Black	Svart	Schwarz	Noir	Negro	Musta	Черный	Zwart
4	Orange	Orange	Orange	Orange	Orange	Oranssi	Оранжевый	Oranje
5	Yellow	Gul	Gelb	Jaune	Amarillo	Keltainen	Желтый	Geel

## INSTALLATION STEPS

1. Cut a 52mm (2 1/16") diameter panel hole (II). You will need a minimum clearance of 55mm (2 3/16") behind the panel to fit the gauge.
2. Remove fastening ring (I). There is an alignment tab on the gauge body (III), place the gauge in the panel hole and mark the position of this tab to correctly align the gauge.
3. According to wiring instruction to do wire connection. Gauge can be connected to 12/24V power directly.
4. Insert wire harness (IV) into port at the back of the gauge.
5. If you purchased a voltmeter gauge, there is no black wire in the (# IV) wire harness.
6. The yellow cable controls the flashing of the red LED: by connecting it to the negative pole, the red LED will not flash; by disconnecting it, the red LED will have the flashing function (in this case we suggest you to cut off and remove the yellow cable).