

## TN Installation Diagram

The Assembly Parts

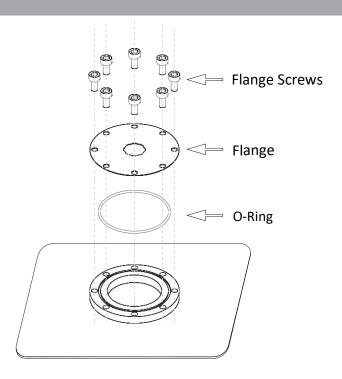


Insert the sensor

Note: Align with the hole

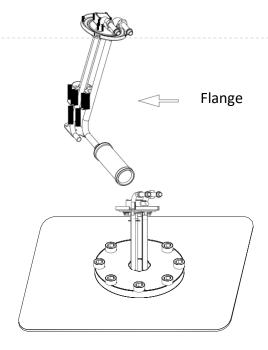


Finish the assembly

Note: Press the sensor downward, spin to 45 degree at the same time

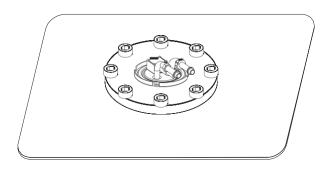


## TNB Installation Diagram

The Assembly Parts

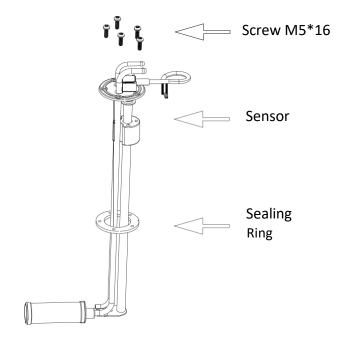

Insert the sensor

Note: Align the screw with crew hole

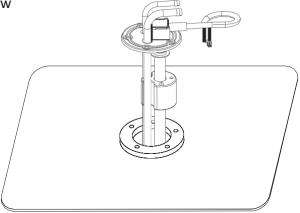

Finish the assembly

Note: First step, pre-lock the screw Second step, follow the star locking order

