

# NKC 42

## User's Manual



www.kusauto.com

### Table of Contents

1. General.....	01
2. Installation.....	02
3. Parameter.....	02
4. Technical Specifications.....	05

### Revision History

Revision	Description
1.0	Original document
1.1	3.2.2 For product type

## 1. General

### 1.1 Introduction

The NKC42 is a universal adapter that allows one/four to connect the existing analog fuel/fresh water/waste water/live well/oil/black water senders or engine performance sensors to the NMEA2000 network.

Please read carefully and follow these instruction for installation, configure, and usage of the adapter in order to ensure optimal performance.


### 1.2 Features

The NKC42 has the following features.

- ◆ Programmable sensor types including fuel, fresh water, waste water, live well, oil, black water, engine oil pressure, engine coolant temp., engine oil temp.
- ◆ Programmable sensor number up to 16 per sensor type.
- ◆ Adapts American standard(240~33 ohm) or European standard(0~190/10~180ohm)resistive senders to nmea2000 network(only useful for fluid level sensor). Calibrated for any resistance range from 0 to 999 or 999 to 0 ohms.
- ◆ NMEA2000 Interface.

### 1.3 Component function diagram


Wire color	
Red	CHANNEL 1
Yellow	CHANNEL 2
Blue	CHANNEL 3
Green	CHANNEL 4
Black	GND

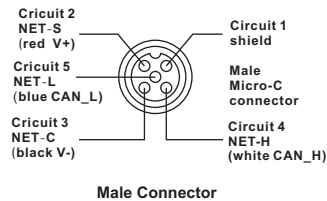

**UP:** In the query interface, used for switching up query page; In the setting interface, used for increasing Numbers.  
**DOWN:** In the query interface, used for switching down query page; In the setting interface, used for reducing Numbers.  
**MODE:** Switch Settings and query interface.

## 2. Installation

### Connecting the NKC42

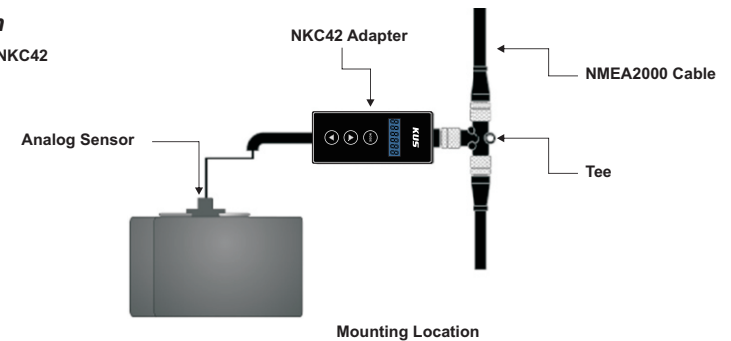

## 3. Parameter

### 3.1 Parameter query

Use UP/DOWN to switch to query interface.

For four-channel adapter, short press MODE in product type interface to switch to the channel what you need to query.



Power on (Network)



Product type



Instance interface



Signal type

### 3.2 Parameter setting

#### 3.2.1 For network

- \* In network query interface, long press MODE key until LCD flashes and release.
- \* Use UP/DOWN TO select the network( NMEA2000/SAE-J1939); Long press MODE key again until LCD stops flashing.
- \* Network type setting done.



NMEA 2000



SAE-J1939

#### 3.2.2 For product type

- \* In product type query interface, long press MODE key until LCD flashes and release.
- \* Use UP/DOWN to switch the product type; Long press MODE key again until LCD stops flashing.Product Setting completed.



First or 1channel



Second channel



Third channel



Fourth channel

#### Notes:

- For four channel adapter, short press MODE to switch the channel what need to set.
- When network is SAE-J1939, All the four channels cannot be set to the sensor with same model.
- KUS standard NKC42 has a total of four channels, and what type each channel corresponds to is not fixed, but can be set.
  - For example, when we set channel 1:
    - \* When we set it to "TYPE 00", it means that the type corresponding to channel 1 is the fuel level.
    - \* When we set it to "TYPE 01", it means that the type corresponding to channel 1 is fresh water level.
  - For example, when we set channel 2:
    - \* When we set it to "TYPE 10", it means that the type corresponding to channel 2 is fuel level.
    - \* When we set it to "TYPE 11", it means that the type corresponding to channel 2 is fresh water level.
    - \* The other channels refer to the table in turn.

www.kusauto.com

The values specific to product

NMEA2000		J1939	
Value	Sensor Type	Value	Sensor Type
00/10/20/30	Fuel level	00/10/20/30	Fuel level
01/11/21/31	Fresh water level	01/11/21/31	Washer Fluid level
02/12/22/32	Waste water level	02/12/22/32	engine coolant level
03/13/23/33	Live Well level	03/13/23/33	engine oil level
04/14/24/34	Oil level	04/14/24/34	Coolant temp(40~120℃,300~23Ω)
05/15/25/35	Black Water level	05/15/25/35	Oil temp(50~150℃,362~20Ω)
06/16/26/36	Oil press(0~5Bar,10~185Ω)	06/16/26/36	Oil press(0~5Bar,10~185Ω)
07/17/27/37	Oil press(0~10bar, 10~185Ω)	07/17/27/37	Oil press(0~10bar, 10~185Ω)
08/18/28/38	Coolant temp(40~120℃,300~23Ω)		
09/19/29/39	Oil temp(50~150℃,362~20Ω)		
0A/1A/2A/3A	Rudder(-45°~+45°)		
0B/1B/2B/3B	Rudder(-90°~+90°)		

#### 3.2.3 Instance (Number) setting

- In Instance query interface, long press MODE key until LCD flashes and release; Use UP/DOWN to set Instance(number); Long press MODE key again until LCD stops flashing.
- Setting completed



Instance

#### 3.2.4 Signal type setting

- 3.2.4.1 Commonly used resistance signal setting
- In signal type query interface, long press MODE key until LCD flashes and release. Use UP/DOWN to set signal type, Long press MODE key again until LCD stops flashing.
- Setting completed



Signal type

Value	Resistance signal
00	240~33Ω
01	0~190Ω
02	10~180Ω
SEF	Self-defined

Values specific to signal

www.kusauto.com

03

04

#### 3.2.4.2 Self-defined resistance signal setting

In resistance signal setting interface, adjust to resistance self-define interface, long press MODE until showing empty level resistance setting interface and release, use UP/DOWN to set the resistance at empty level. And long press MODE to switch to ¼ level resistance setting interface, and set the resistance at ¼.

Use the same method to set the resistance at ½, ¾ and full level.

After setting the resistance at full level, long press Mode until LCD stop flashing. And setting completed.



Self defined interface



0/4(Empty level) setting interface



¼ level setting interface



2/4 level setting interface



3/4 level setting interface



4/4 level setting interface

## 4. Technical Specifications

### 4.1 Electrical

Operating Voltage	9~16V
Power Consumption	<50mA
Load Equivalence Number(LEN)	1

### 4.2 Environmental

Operating temperature	-30~75 C
Storage temperature	-40~80 C
Degree of protection	IP67

### 4.3 Mechanical

Size	93*42*25/ 90*40*25 mm (Excluding NMEA2000Connector&Cable)
Weight	115 g

### 4.4 Certifications

NMEA2000	Level B+
----------	----------

www.kusauto.com

### 4.5 MEA2000 Parameter Group Number(PGN)

Description	PGN	PGN name
Periodic data PGNs	127505	Fluid level
	127489	Engine parameter
	127245	Rudder
Response to requested PGNs	126996	Product information
Protocol PGNs	059392	ISO acknowledge
	059904	ISO request
	060928	ISO address claim

### 4.6 SAE-J1939 Parameter Group Number(PGN)

Description	PGN	PGN name
Periodic data PGNs	65276	Fuel/Washer fluid level
	65263	Engine coolant/Oil level/ Oil pressure
	65262	Engine coolant /Oil temperature

# KUS

Since 1984

www.kusauto.com



05

06

www.kusauto.com